



# DeWalt DW936 Saw Blade Replacement

Replacing the saw blade on DeWalt DW936

Written By: Scott Weinhardt



## INTRODUCTION

This guide will show you the necessary steps to replace the saw blade. The blade is not included in these pictures.

## Step 1 — Saw Blade



- Take out the Allen Key that is located on the front of the saw below the smooth control handle on the top of the saw.

## Step 2



- Use the Allen Key to replace to loosen the bolt where the center of the saw is/would be.



### Step 3



- Remove the circular nut that is used to hold the saw blade in place. It slide right off.

### Step 4



- Lift up the plastic cover on the bottom to expose the bottom slot on the saw.

## Step 5



- Place blade on the peg in the middle of the saw. The peg has two flat sides as does the saw hole to prevent slipping when spinning.

---

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 04:02:11 AM.